

Road haulage

G1

# Coupling articulated drawbar trailers (multi-axle trailers)

Coupling articulated drawbar trailers is a dangerous process which frequently leads to accidents with serious injuries, often resulting in death. The following steps must therefore be followed:

### Coupling:

1 Verify the parking brake of the trailer is applied and that the wheel chocks are in place.

#### Attention:

Automatic braking by disconnecting the brake lines is not sufficient.


Release the front axle brake.


### Attention:

When the front axle brake is released, the drawbar may turn sideways if the wheels are not on a level, smooth surface.


- Move the towing vehicle up to approx. 1 m from the towing eye. Apply the parking brake before exiting the vehicle!

  Then use the landing gear to adjust the towing eye to the height of the coupling.
- 4 Open coupling.

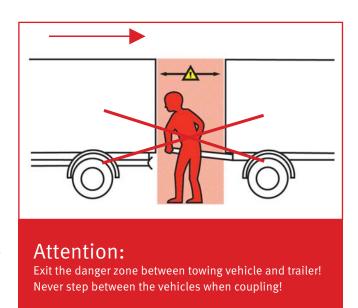


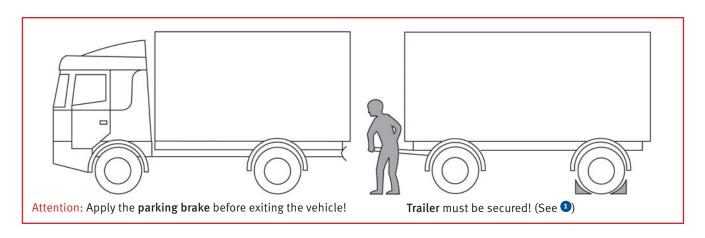

## Coupling articulated drawbar trailers (multi-axle trailers)

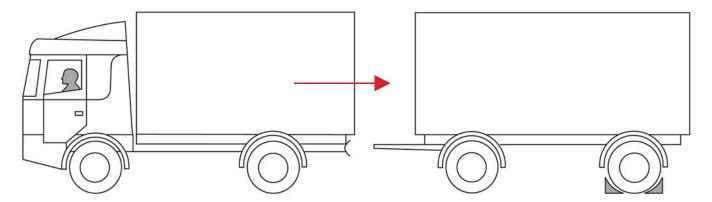

**5** Couple by **reversing** the towing vehicle.

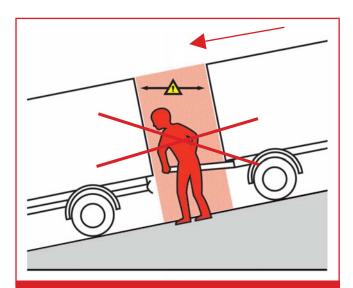

## Attention:

Due to the extreme accident risk, coupling trailers by running up trailers is strictly forbidden.

- 6 Lock the towing vehicle with the parking brake and verify the coupling is closed and secured.
- Connect the connecting cables. Follow the correct order for the compressed air lines:
  - a) Brake line (yellow coupler)
  - b) Supply line (red coupler)
- 8 Release the parking brake of the trailer, remove the wheel chocks and carry out a tug check.

### **Uncoupling:**

Uncoupling takes place in reverse order, whereby the towing vehicle should be positioned as far away as possible.

#### Attention:

First apply the parking brakes of the **towing vehicle and trailer**!

Put the wheel chocks in place on the trailer.

Disconnect the connecting cables. Follow the correct order for the compressed air lines:

- a) Supply line (red coupler)
- b) Brake line (yellow coupler)

Note:
Specifics / Responsibilities at our company: